

INSTRUCTIONS FOR CR1R

(Remote for TV with CABLE BOX)

- Works over 250 brands of commercial and retail TVs
- No Menu button - So Patients and Guests cannot change settings
- Hidden Battery compartment and attached door to help prevent batteries from being taken
- Uses 2 AAA batteries
- Compatible with Comcast® and other cable system boxes
- Will not operate TV/DVD, VCR or DVD/VCR combination units. Will not operate with Lodgenet® or Oncommand® movie systems

Battery Installation:

1. Open cover: With keypad facing you, first slide dark lens cover away from you (photo A, step 1) and then lift lid upward from the back (photo A, step 2)
2. When placing AAA batteries in the compartment note the + and - symbols on the metal hinge should make contact with the corresponding + and - end of each battery (photo B).
3. Closing cover: **With keypad facing away from you** gently close cover by pressing downward (photo C, step 1) and sliding it toward the front (keypad) until it is aligned. (photo C, step 2)
4. Test remote by pressing the power button; the LED should light indicating that the batteries are in correctly. If the LED doesn't light, then the batteries are either in wrong or the batteries are bad.



Photo A

Open with keypad facing you



Photo B



Photo C

Close with keypad facing away from you

FOR TV WITH AN INDIVIDUAL CABLE BOX IN EACH GUEST ROOM, START HERE: If you do not have an individual cable box in each guest room, scroll down to TV ONLY INSTRUCTIONS

1. Manually turn on the TV and the Cable Box and then **stand back about 5 feet from the TV. Point the remote at the CENTER of the front panel of the TV.** It will not be necessary to point the remote at that exact area once the remote is set-up.
2. **Press** and firmly **Hold down** the **Setup button**, do not release. The LED will blink once and then after 7 seconds it will initiate code search. The LED will continue to blink every 2 seconds. Once your TV shuts off, immediately remove your finger from the Setup button; the code automatically locks in.
3. Turn TV back ON, **DO NOT PRESS CHANNEL +/- buttons as you may change input on TV.** Test the remote to make sure that you have the correct code by doing the following: Press Power ON/OFF and VOLUME +/- **ONLY.**

If power and volume buttons work correctly on the remote then proceed to step #4.

If you inadvertently changed the input on the TV, manually change it back from the TV's control panel and then try power and volume buttons **ONLY.**

If the power and volume keys are not working properly, you may not have an exact code match. Start again at step #2, the code search will continue where it left off. Once you have the correct code, go to step #4 to program the cable box.

4. **To Program the Cable Box** make sure the cable box and TV are on. Next, **Hold Down the CBL button and CC button at the same time** and wait until the LED light blinks quickly 3 times. Then immediately release both buttons. Now point the remote toward the cable box and TV and try the channel up and down buttons and the channel numbers. If the channels change correctly, make sure volume and TV power on and off work and assuming they do ,you are done.

5. If the channels are not changing properly make sure the **TV is on now but the cable box is OFF**. NOTE: this time **DO NOT HOLD THE CC button down, just press and hold down the CBL button**. Firmly hold the CBL button down while pointing the remote at the cable box (not the TV). When the cable box turns on, **immediately** remove your finger from the button. Now turn the CABLE box off and then back on by pressing the CBL button once (**Not the TV power button**). Next test channel up and down and the channel numbers. If the channels change correctly, make sure volume and TV power on and off operate, if so, you are done.

If it is not working properly start again at step #5.

IMPORTANT TROUBLESHOOTING INFORMATION

A) **If you think you missed the TV code or are testing remote on different brand TV's,** or are having difficulty operating TV; first, reset the remote by **pressing and holding** the **Setup button for 3 seconds** and then **while still pressing the Setup button down press and hold down the CC button** at the same time until the LED light blinks quickly 3 times, instantly release both buttons. You have now reset the code list back to the beginning. Go back to step #1 and repeat all steps #1 through #5 again.

Note: Many cable boxes do not have a separate power button and are always on. If your cable box does have a separate power button, once you have set-up the cable box to work with the Clean Remote it can be powered on or off by pressing the CBL button.

TV ONLY INSTRUCTIONS, START HERE: If your TV is connected to an individual cable box in each guest room scroll up to step 1.

Note: If you've already set up the remote to work both a TV and a Cable Box and now wish to operate TV only. Hold down the CBL button and SETUP button together until the remote blinks 3 times quickly instantly release both buttons. This will reset the remote completely.

Turn on the TV and then stand back about 5 feet from TV and Point the remote at the CENTER of the front panel of the TV. It will not be necessary to point the remote at that exact area once the remote is set-up.

Press and firmly Hold down the Setup button, do not release. The LED will blink once and then after 7 seconds it will initiate code search. The LED will continue to blink every 2 seconds. Once your TV shuts off immediately remove your finger from the Setup button; the code automatically locks in.

Test the remote. If everything works, you are done. If the main functions are not working properly, you may not have an exact code match. Start again at step #1. The code search will continue where it left off.

Important Note: If you think you missed the code or are testing remote on different brand TV's: Reset the remote back to the beginning of the code search; first press and hold the Setup button for 3 seconds and then while still pressing the Setup button down, press and hold the CC button down at the same time until the red LED light blinks quickly 3 times. You have now reset the code list back to the beginning

