

# Philips Commercial TV Changing the Switch On Screen to TV

**Changes the TV setting so that when you power the TV ON it goes to a TV channel instead of the HOME screen. The HOME screen (and features) remains accessible via the remotes HOME key.**

Step 1 - Access Professional Settings Menu (Setup Menu)

Press the following keys in a consistent cadence:

Mute, ◀, ▶, ▲, ▼, OK

Step 2 - Select "Switch on Settings" and press OK

Select "Switch On Channel Filter"

Select "TV Channels" and press OK

Step 3 - Arrow back to the main Professional Settings Screen

Then:

Select "Features" and press OK

Select "Welcome Screen"

Select "Screen Saver As Welcome Screen"

Select "No"

Step 4 - Press "Exit" key repeatedly until you exit the Professional Settings Menu