

INSTRUCTIONS FOR CR1R AND CR3BCB

BATTERY INSTALLATION



Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).



Install **2 AAA batteries**. Make sure the + and - symbols on the metal hinge of the battery compartment correspond with the + and - end of each battery.



With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).

4 Test The Remote by pressing the power button. The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

Notice:

The optional screw for the battery compartment is taped to the box lid.

Take care not to discard with packaging.

No Setup required for ANY Samsung, LG or RCA* TV's

FOR ALL OTHER TV BRANDS, FOLLOW THE ONE-TOUCH SETUP INSTRUCTIONS BELOW

*RCA Commercial TVs Only

With the TV ON, point the remote at the TV's front panel. (Note: For best results, stand at least 5 feet from the TV)

Press and firmly hold down the SETUP button. **Do not release**. The LED on the remote will blink once and then after 7 seconds begin searching for your TV's code. The LED on the remote will blink every few seconds as it searches. **The moment your TV shuts OFF, release the SETUP button to lock in the code.**

TESTING THE REMOTE:

TV Only

Test power, volume, and channel functions. If all work correctly, setup is complete. If not, you may not have an exact code match for your TV model. Repeat the search process (above) to advance to the next code for your TV brand and retest the remote.

TV + Cable Box

Test power and volume functions, **DO NOT CHANGE CHANNELS**. If these functions operate correctly, please turn to **Page 2**.

TROUBLESHOOTING TV CODE SETTINGS

Important: If you accidentally passed the code for your TV model or intend to use the remote on a different TV brand, **RESET** the remote and then follow the one-touch setup instructions above.

RESET: Press and hold the SETUP and CC buttons down simultaneously until the LED on the remote blinks 3 times, then release both buttons. Your remote is now reset.

