



BR100B Instructions

**This remote is preprogrammed to operate the following brands without setup:
LG, Samsung, RCA, Philips, Vizio, Hisense, Panasonic, and Zenith TVs**

Simply insert batteries and you're done.

Note: Reprogramming the remote will make it operate only the brand you reprogrammed it for.

Reprogramming your Remote:

1. Manually turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on, now release the button.
3. Enter the 3-digit code from the code table. After entering the code, the indicator light will turn off, indicating completion.

Note: If the LED blinks rapidly after entering the code, you may have entered an invalid code. Double-check the code list and try again. If volume and channel functions don't work, try another code.

Important: If your TV code is not listed or the TV doesn't respond, try using code search:

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on, then release the button.
3. Press the channel up button slowly and repeatedly (can take 60 or more times) until the channel changes.
4. Press ENTER to lock in the code.

Note: If you pass the code, press the CH- key to go backward through the library until the TV changes channels again, then press ENTER to lock in the code. You can identify the code for future use with the following step.

Code Identification:

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on.
3. Press the SET-UP key again and release.
4. Slowly press each number key from 0 to 9. When the LED blinks, that is the first digit of your code. Repeat step 4 to find the next digit and repeat once more for the third digit.

To return the Remote to Factory Setting:

1. Press and hold SETUP until the LED stays on.
2. Press CC.

New feature for digital channels that use ● or —	See next page for all codes:
LG.....710	ONN.....727
Samsung.....711	Sceptre.....732
RCA.....717, 718, 719, 720, 710	TCL.....723,724
Philips.....712, 721, 722	Toshiba.....728
Element.....731	Vizio.....726
Hisense.....725	Westinghouse.....730,731
Insignia.....729	

Advent	911, 932, 933, 614, 303, 201, 301, 909, 919, 920, 934, 082, 109	MTC	903, 601, 617, 619, 103
Aiko	900	Multitech	901
Akai	601, 903, 922, 027, 038, 039, 041, 117	NAD	609, 607, 603
AOC	079, 601, 617, 103, 076, 077, 078, 080, 156	NEC	601, 617, 619
AOMNI	161	Nikko	601, 607, 900
Apex	000, 618, 604, 140, 155	Norcent	078, 079
Ascoli	237	Noshi	800
Aspect	606	NTC	900
Audiovox	100, 901, 900, 101, 015, 016, 133	Olevia	923, 023, 024, 025, 026, 228
Belcor	617	ONN	400
Bell&Howell	620, 611	Onwa	901
Blue Diamond	407	Optimus	620, 004, 603
Bradford	901	Optonica	500, 610
Brockwood	617	Orion	902, 614, 615, 109
Broksonic	902, 614	Panasonic	004, 202, 802, 610, 301, 302, 303, 055, 056
Candle	601, 619	PDI	007, 008, 009, 010, Bed Code A 713, B 714, C 715, D 716
Celebrity	605	Philco	301, 614, 601, 606, 617
Celera	092, 094	Philips	301, 302, 303, 305, 601, 615, 617, 803, 078, 905, 906, 907, 908, 909, 011, 034, 035, 036, 037, 040, 046, 047, 048, 080
Changhong	618	Pilot	601, 617
Citizen	903, 601, 619, 900, 614	Pioneer	603, 600
Clairtone	103	Polaroid	400, 910, 913, 915, 229, 917, 920, 012, 013, 028, 029, 030, 031, 032, 033, 041, 083, 084, 109, 113, 117, 128
Coby	135, 136, 151	Portland	617, 900
Concerto	619	Prima	085
Contex	901, 103, 234	Prism	202
Craig	901	Proscan	400, 074, 085, 112, 127, 234, 233, 235, 168, 169, 170, 171, 172, 173, 174, 175, 232, 231, 230, 930
Crosley	303, 301	Proton	607, 102
Crown	901	Proview	112, 113, 114, 115, 116
Curtis/Curtis Mathes	400, 301, 620, 100, 500, 232, 231, 903, 044, 621, 606, 619, 611, 603, 102, 153, 127, 168, 169, 170, 171, 172, 173, 174, 175, 930	Pulsar	700, 617
CXC	901	Quasar	004, 202, 610, 802
Daewoo	100, 617, 900, 101	RadioShack	400, 620, 610, 901, 621, 607, 617, 619
Daytron	617	Realistic	620, 610, 901, 601, 607, 617, 619
Dumont	700, 617	RCA	400, 112, 237, 074, 158, 230, 617, 800, 280, 296, 232, 231, 234, 612, 299, 281, 297, 501, 298, 619, 127, 600, 402, 403, 401, 404, 405, 623, 042, 406, 168, 169, 170, 171, 172, 173, 174, 175, 930, 609
Durabrand	902, 901, 201, 614, 615, 914, 918	Rhapsody	103
Dynex	614, 085, 086, 109, 110, 112, 620, 903, 619, 910	Roomconx	614, 615, 902, 924
Electric Mirror	225	Runco	700, 601
Electroband	605, 103	Sampo	601
Electrohome	614	Samsung	930, 903, 601, 607, 617, 619
Element	112, 160, 113, 114, 115, 116, 152	Sansui	614, 902, 615, 109, 234, 235, 233
Emerson	620, 902, 022, 614, 901, 200, 201, 607, 617, 615, 602, 103, 101, 930, 903, 112	Sanyo	620, 801, 931
ESA	901, 201, 601, 903	Sceptre	605
Fisher	620, 801	Scotch	607
Fujitsu	615, 300	Scott	902, 901, 607, 617, 615
Funai	901, 615, 022, 201	Sears	400, 301, 620, 609, 607, 615, 622, 801, 201, 402
FUTURETEC	901	Seiki	112, 113, 114, 115, 116, 160, 152
GE	400, 202, 100, 200, 607, 608, 802, 042	Sharp	500, 610, 501, 929
GFM	201, 022, 133	Sharp (LCD)	912, 929, 156
Gibraltar	700, 601, 617	Shogun	617
Global Vue	125, 126	Signature	611
GoldStar	601, 607, 617, 619	Simpson	803
Grundig	901, 615	Sony	605
Haier	914, 918, 043, 045, 092, 093, 094, 095, 096, 097, 130, 131, 127, 122, 626	Soundesign	901, 607, 615
Hallmark	607	Soyo	061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073
Hannspree	080, 627	Squareview	201
Harvard	901	SSS	901, 617
HCI	020 (bed 1), 021 (bed 2)	Starlife	901
Hisense	112, 614, 902, 138	Superscan	201, 500, 912, 929
Hitachi	606, 619, 611, 005, 238, 916, 060, 150	Supersonic	234
HP	075	Supreme	605
ILO	921, 925, 609, 201, 059	Sylvania	301, 601, 022, 201, 901
Infinity	301	Symphonic	901, 201, 022
Infocus	400	Syntax	023, 024, 025, 026
Inteq	700	Tandy	500
Insignia	084, 614, 112, 303, 201, 301, 909, 919, 920, 934, 081, 082, 083, 085, 086, 108, 109, 110, 111, 117, 620, 903, 619, 910, 930	Tatung	802
Iris	250	TCL (non-Roku)	400
JBL	301, 000, 604, 618	Technics	004, 202
JCB	605	Techwood	202, 619
JC Penny	400, 609, 202, 903, 601, 607, 608, 617, 800	Teknika	301, 901, 104, 605, 617, 615, 619, 611, 900
JVC	701, 159, 157, 226	TMK	607, 619, 602
KEC	901	Toshiba	609, 903, 613, 910, 619, 058, 620
Kenwood	601, 617	Trutech	101, 201, 617, 900, 015, 016, 017
KLH	618	Upstar	176, 177
KTV	901, 601, 103	Venturer	015, 016, 133
Kolin	023, 024, 025, 026	Vertex	236
Konka	904, 001, 304, 002, 003, 041, 083, 117	Victor	701
LG	619, 227, 910, 700	Vidtech	607, 617
Logik	611	Viewsonic	087, 088, 089, 090, 091, 098, 099, 105, 106, 107, 019, 132
Luxman	619	Viore	903, 119, 120, 121, 122, 123, 124, 626, 154, 127
LXI	400, 301, 620, 609, 607	Vivitek	058
Magnavox	301, 302, 303, 601, 615, 617, 803, 078, 905, 906, 907, 908, 199, 034, 909, 011, 035, 036, 037, 040, 046, 047, 048	Vizio	927, 011, 013, 014, 626
Majestic	611	Wansa	237
Marantz	301, 601	Wards	301, 610, 601, 607, 608, 617, 615, 619, 611
Matsushita	004	Westinghouse	926, 928, 049, 050, 051, 052, 053, 054, 624, 625, 626, 127, 129, 152
Megatron	607, 606	White Westinghouse	614, 101, 605
MEI	103	Yamaha	601, 617
Memorex	118, 620, 004, 614, 104, 095, 607, 615, 611, 700, 303, 201, 301, 909, 919, 920, 934, 012	X2-GEN	057
MGA	104, 601, 607, 617, 500	Zenith	700, 614, 611, 900, 619, 910, 215, 216
Midland	400, 700, 202		
Minutz	608		
Misakai	201		
Mitsubishi	500, 104, 607, 617, 601		
Motorola	500, 802		