

INSTRUCTIONS FOR CR4-2 and CR4B-2

Full Function TV Remote Control With Input, Navigation, Dash For Digital Channels And More.

This Remote Is Not For Cable Boxes Or Any Brand Of ROKU Or FIRE TV

Battery Installation




Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).



Install 2 AAA batteries. Make sure the + and - symbols on the metal hinge of the battery compartment correspond with the + and - end of each battery.



With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).

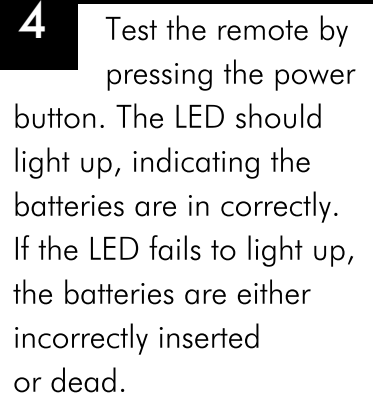

Test the remote by pressing the power button. The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

Important:
The optional screw for the battery compartment is taped to the lid of the blue box.

IMPORTANT

**The Remote Is Now Ready To Operate
All LG, Samsung, *RCA or *Philips TVs**

(*RCA & *Philips Commercial TVs)

**If your CR4-2 or CR4B-2
was manufactured
after 11.01.2024
It can be programmed
for additional TV
brands and systems.
A code is required, see below**



Manufacture Date

To enter the code Press and hold both the POWER and INPUT keys until the LED light turns on and stays on. Next, enter the corresponding code from the list below. If entered properly the LED will turn off. Test the remote; if any features do not function properly, try the next code (if one is listed).

Samsung LYNK Cloud

Hotel Key = INFO Key 39
Hotel Key = HOME Key 40

PDI TV (Multi-Bed)

PDI Bed A 04
PDI Bed B 05
PDI Bed C 06
PDI Bed D 07

Cruise Line 38

Residential TVs

Element	22
Hisense	16 26
Insignia	20
NEC	24
ONN	18
Philips	12 13
RCA	10 29 08 09 11
Sceptre	23
TCL	14 15
Toshiba	19
Vizio	17
Westinghouse	25 21 22

DIRECTV DRE SYSTEMS

Hisense	34
Insignia	33
LG	34
ONN	31
Philips	36
RCA	31 34 37
Samsung	35
Sony	30
TCL	31
Toshiba	32
Vizio	34
Westinghouse	30

For Reset Instructions and Philips TV Tips See Below

Reset Instructions

(Returns The Remote To Factory Settings)

Press and hold both the POWER and 0 until the LED flashes 3 times. The Remote is now reset and will operate any LG, Samsung, *RCA or *Philips TV (default mode).

Philips TV Tips

Did you know your Philips TV can power on to a TV Channel or the Home Screen?

The following options may be helpful but are not required: Your TV's home screen serves as the central hub for many TV features. By default, the Philips TV powers ON to this screen, providing guests with easy access to popular streaming apps like NETFLIX and YouTube, as well as casting. However, if your property does not offer these smart features, you can adjust the "Switch On Settings" so that the TV turns ON and displays regular TV channels instead.

For more information on changing your TV's "Switch On Settings" contact your Philips Dealer or visit the FAQ page on cleanremote.com. Regardless of the setting you choose, launching TV, streaming, and casting options can be done from the home screen.

Note: For more direct access to your Philips TV's Input and Sleep functions, set the remote to Philips only mode: Press and hold both the POWER and INPUT until the LED blinks and then stays on solid. Next enter code 03 to complete the process. If you have any issues, please visit cleanremote.com for customer support information.