


Battery Installation

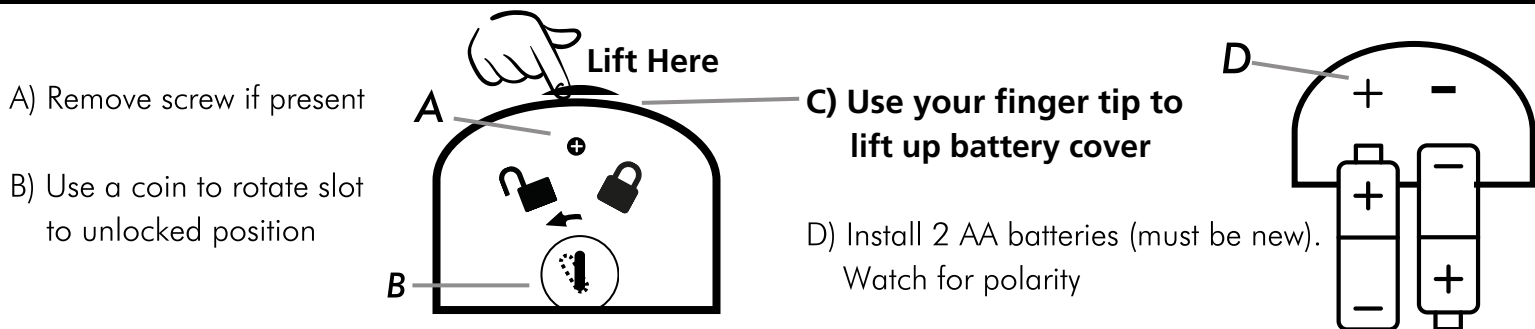

Ensure the batteries are installed correctly. A light to the left of the power button will flash any time a button is pressed. If it does not, reinstall the batteries correctly or check the condition of the batteries.

Note: The optional screw for the battery compartment is not required, but will help reduce battery loss. (Screw is taped inside blue box)

The Remote is now ready to operate any LG, Samsung, RCA or Philips Commercial TV

Important

If you are using an in-room entertainment system (GRE), you will need to program your remote.

GRE Streaming System Codes

Enseo®004
World Cinema® / WorldVue005
Bonvoy®006
GuestTek®007 or 008
Sonifi®010, 011, 012 or 014
LG ProCentric Direct NETFLIX®038
Samsung LYNK Cloud NETFLIX®041

AEP® Box & LG, Samsung or RCA Commercial TV013
For all other TV brands, see instructions below.	
Dish Network® Evolve® MPI/MTI cable protocol026
For all other TV configurations, see instructions below.	
www.cleanremote.com	

To Enter Code:

To select your system, PRESS and HOLD both  and  until the light to the left of the POWER button lights up solid, then enter the corresponding three digit code. The light on the remote turns off to confirm the code is stored. If the light flashes repeatedly, repeat the process above to add the code.





 
If all of your system's functions are not working properly, please try the next code for your system.



See back page for learning feature, tips and reset instructions

Learning Function



The learning feature allows you to add or teach a command from your original remote to your Clean Remote SCR10. **You can use this feature to REPLACE the function of any button on the Clean Remote SCR10.**

- 1) On the Clean Remote SCR10 PRESS and HOLD both the  and  until the light to the left of the POWER button lights up solid.
- 2) Point both remotes at each other  and select the Clean Remote SCR10 button you wish to teach the new function to by PRESSING it one time.
- 3) PRESS the button on the original remote you want the Clean Remote SCR10 to learn, one time. The light to the left of the POWER button on the Clean Remote SCR10 will flash to confirm the process is complete.

Simply repeat these steps to learn other button commands.

Factory Reset

To restore the Clean Remote SCR10 to its original factory settings.

PRESS and HOLD both the  and  until the light to the left of the POWER button flashes 3 times.

The remote is now reset, it will now operate LG, Samsung, *RCA and *Philips TVs.

Philips TV Tips

Visit our website's FAQ section for tips, including how to select your Power On setting and more. (For example the TV's home screen or a TV channel)

Important: This remote is not compatible with cable company set-top boxes. Visit our website for cable set-top box capable models.

www.cleanremote.com

DIRECTV AEP and DISH EVOLVE SETUP INSTRUCTIONS

The SCR10 requires a code to operate these systems:

To Enter Code:

To select your system, PRESS and HOLD both  and  until the light to the left of the POWER button lights up solid, then enter the corresponding three digit code. The light on the remote turns off to confirm the code is stored. If the light flashes repeatedly, repeat the process above to add the code.

DIRECTV AEP		DISH EVOLVE (1)	
Default	013	Default	026
LG, Samsung and RCA Commercial TVs	013	LG, Samsung and RCA Commercial TVs	027
Element	023	Element	036
Fire TV	022	Fire TV	035
Insignia	022	Insignia	035
Magnavox	025	Magnavox	037
ONN	015	ONN	028
Philips	025	Philips	037
RCA (Residential)	015, 016	RCA (Residential)	028, 029
Roku TV	022	Roku TV	035
Sceptre	017, 018	Sceptre	030, 031
Sony	019	Sony	032
TCL	020	TCL	033
Toshiba	021	Toshiba	034
Westinghouse	019, 023	Westinghouse	032, 036